


TODDY® COLD BREW SYSTEM COMMERCIAL MODEL | ASSEMBLY

WASH BEFORE USE. Make sure the spigot with washer is flush with the unit. Position the spigot upside down. Screw the nut with washer on the end of the shank until hand-tight. Continue to hold the nut and screw the spigot clockwise until it is in its normal vertical position.

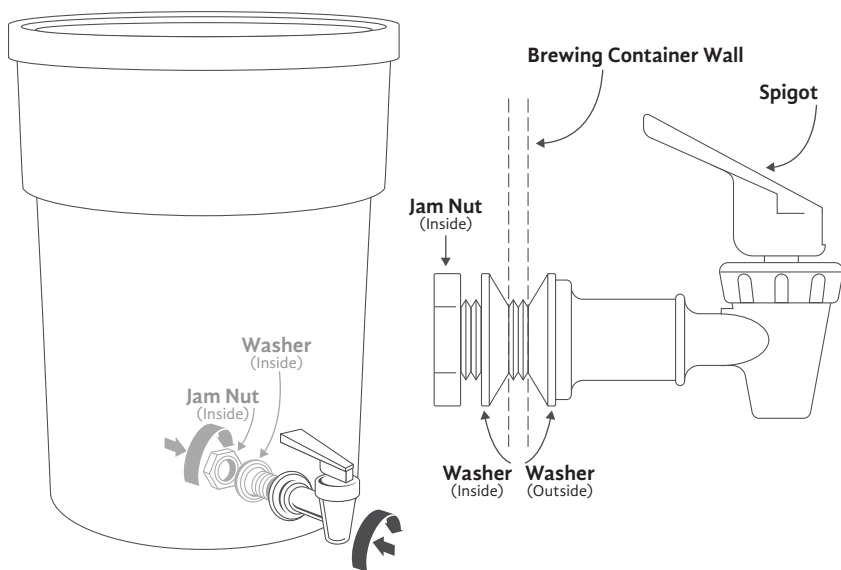

Screw the spigot, the inside & outside washers, and the jam nut together through the hole in the brewing container wall.

TODDY
cold brewed. simply better.™

For complete instructions
and to learn more about
Toddy® products, visit
ToddyCafe.com/brewing.



Made in USA of U.S. and imported parts
Loveland, CO 80538 | +1 (970) 493-0788

©2022 Toddy, LLC | Version: 11-2022